


MC-9 PARTS MANUAL

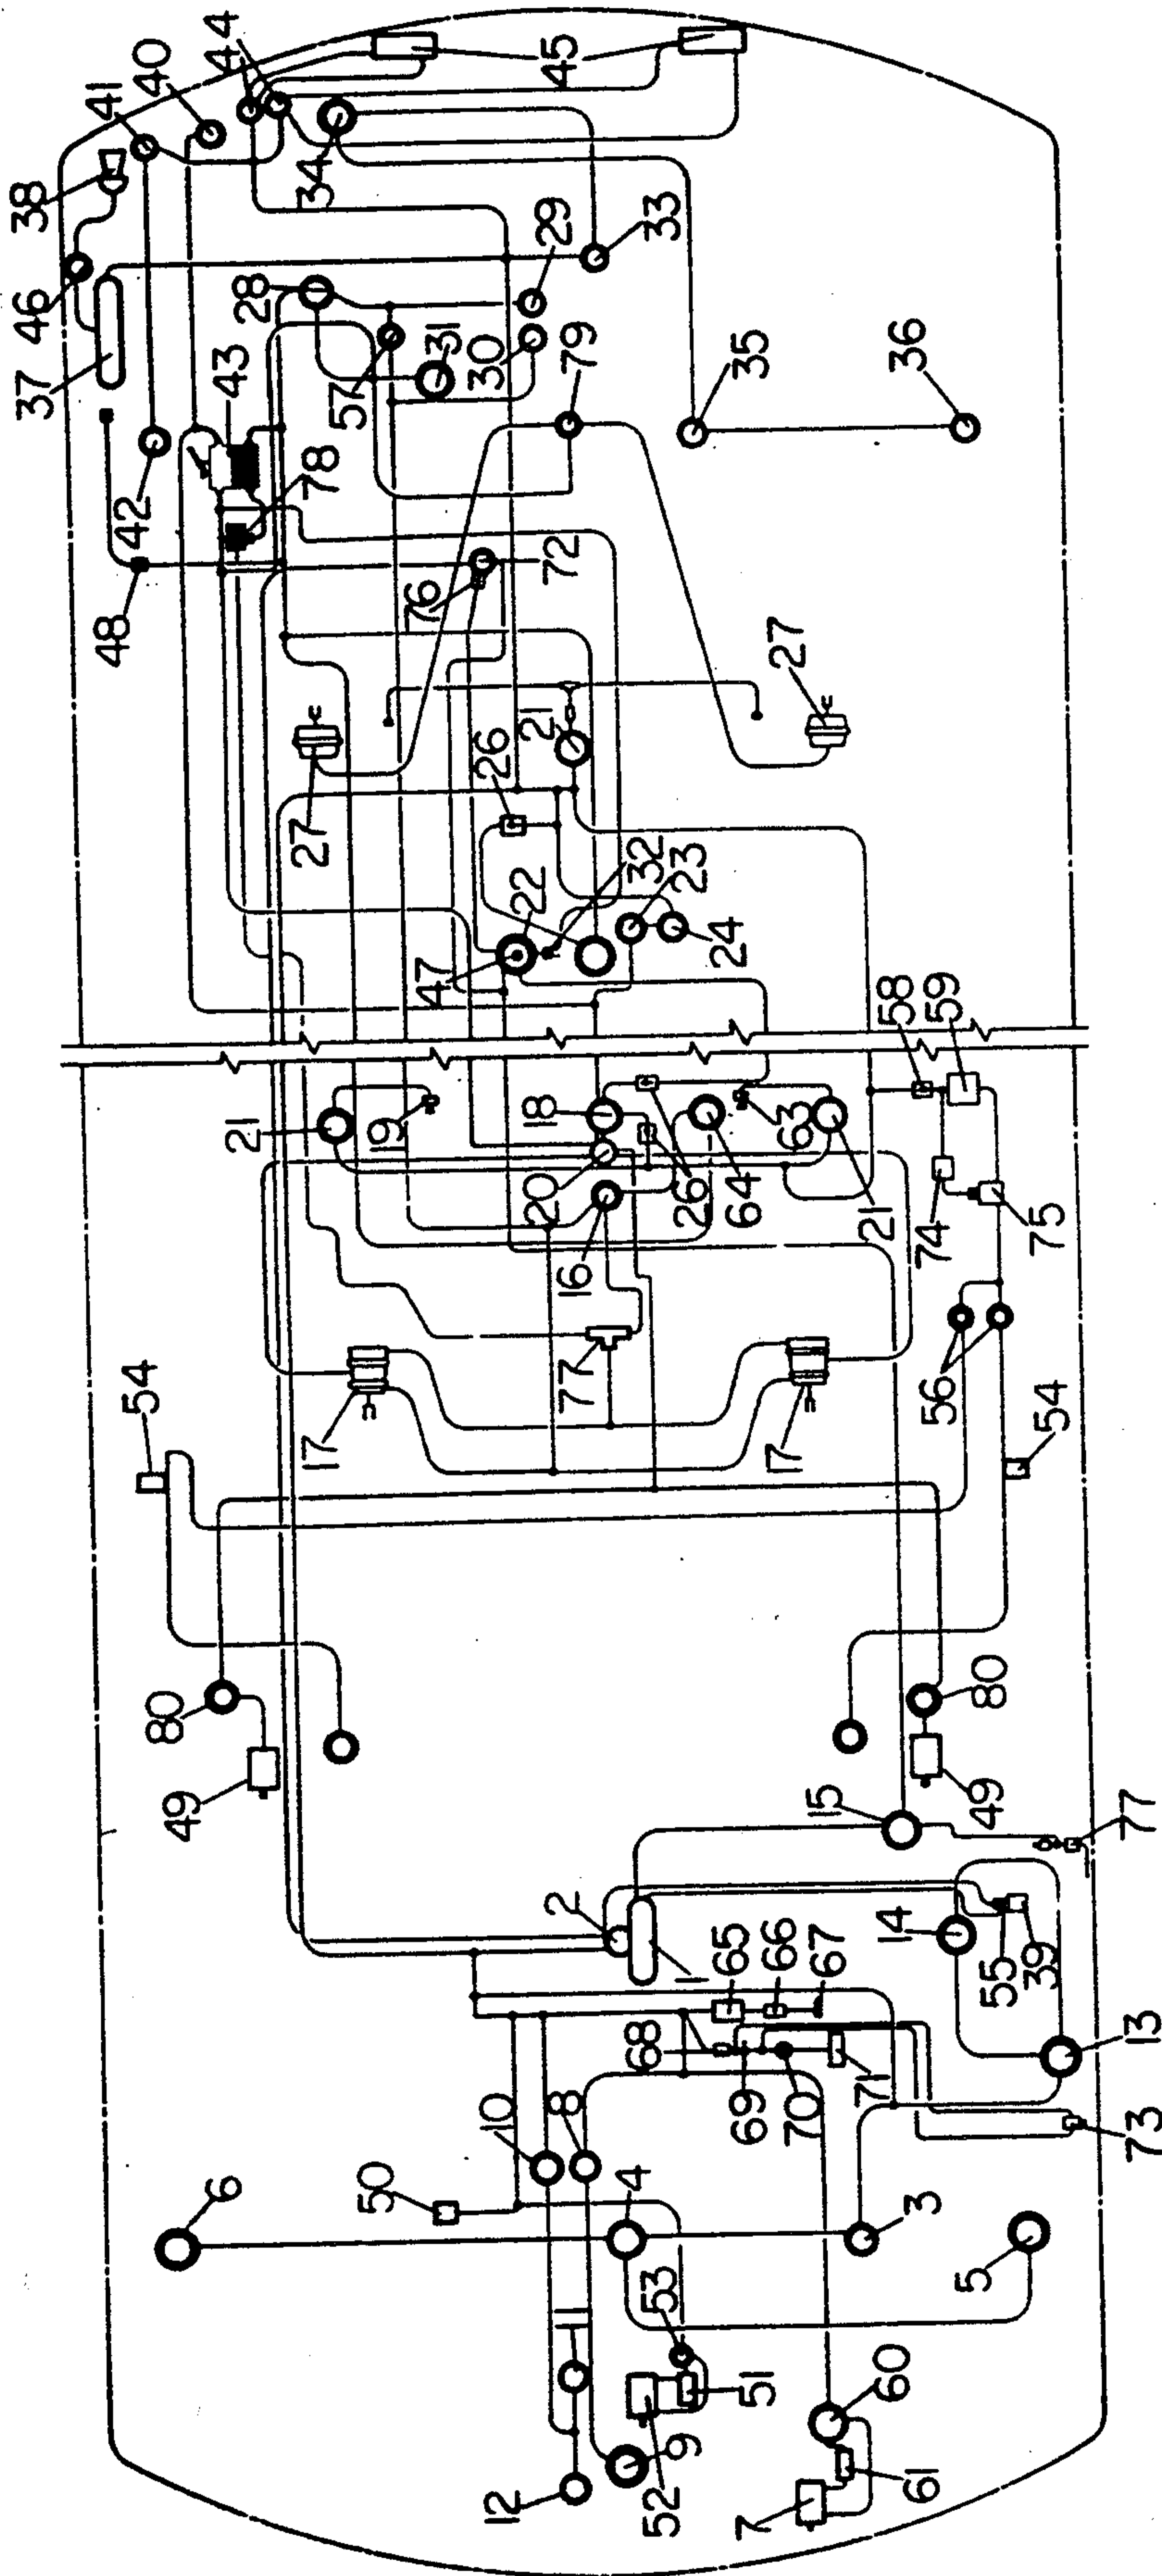

PARTS IDENTIFICATION GUIDE CONTROLS AND SWITCHES

MC-9 PARTS MANUAL

KEY	PART NUMBER	DESCRIPTION	NOTE	QTY.
<u>PARTS IDENTIFICATION GUIDE - SWITCHES & CONTROLS</u>				
1	4.07	Air Compressor		
2	4.08	Governor		
3	6.10	Shutterstat Air Filter		
4	6.10	Shutterstat		
5	6.02	Shutter Cylinder R.H.		
6	6.02	Shutter Cylinder L.H.		
7	16.02	A/C Air Cylinder		
8	8.22	Engine Shutdown Solenoid Valve		
9	8.22	Engine Shutdown Cylinder		
10	8.22	Fast Idle Solenoid Valve		
11	8.32	Fast Idle Limit Cylinder		
12	8.22	Fast Idle Cylinder		
13	17.2	Manual Dump Valve - Chemical Tank		
14	17.2	Dump Cylinder - Chemical Tank		
15	4.20	Discharge Muffler		
16	4.29	Inversion Valve		
17	4.05	Brake Chamber R.H. & L.H. Drive		
18	4.19	Dry Air Tank		
19	12.7	Suspension Air Filter L.H. Rear		
20	4.11	R-8 Relay Valve		
21	12.6	Height Control Valve L.H. & R.H. Rear & L.H. & R.H. Front		
22	4.19	Wet Tank		
23	12.7	Type "E" Filter		
24	12.7	Air Pressure Protection Valve		
25	4.19	Parking Tank		
26	4.22	Check Valve		
27	4.02	Front Brake Chamber		
28	4.28	Push-Pull Control Valve		
29	4.14	Emergency Brake Fast Idle Safety Switch		
30	4.13	Emergency Brake Stop Light Switch		
31	4.13	Service Brake Stop Light Switch		
32	4.19	Moisture Ejector Valve		
33	4.22	Door Solenoid Valve		
34	4.22	Door Manual Dump Valve		
35	4.12	Door Quick Release Valve		
36	3.10	Door Air Cylinder		
37	4.19	Accessory & Air Ride Tank		
38	4.24	Air Horn		
39	4.10	Alcohol Evaporator		
40	7.11	Air Pressure Gauge		
41	3.34	Windshield Washer Valve		
42	3.34	Windshield Washer		
43	4.15	Brake Valve		
44	3.34	Windshield Wiper Controls		
45	3.34	Windshield Wiper Motor L.H. & R.H.		
46	4.24	Air Horn Foot Valve		

MC-9 PARTS MANUAL

KEY	PART NUMBER	DESCRIPTION	NOTE	QTY.
<u>PARTS IDENTIFICATION GUIDE</u> <u>SWITCHES & CONTROLS CONT'D</u>				
47	4.19	Safety Valve (150 PSI, 1032 kPa)		
48	4.22	Emergency Fill Check Valve		
49	4.05	Brake Chamber - Trailing Wheels		
50	16.10	Generator Control & Low Air Switch		
51	4.22	Blower Belt Pressure Regulator		
52	6.05	Blower Gearbox Belt Tension Cylinder		
53	6.05	Cylinder Control Valve		
54	4.17	Safety Valve		
55	4.22	Check Valve - Alcohol Evaporator		
56	4.22	L.H. & R.H. Bellows Control Valve		
57	4.12	Parking Brake Quick Release Valve		
58	4.22	Check Valve - Bellows		
59	4.22	Trailing Wheel Suspension Regulator		
60	4.22	A/C Belt Tension Cylinder Control Valve		
61	4.22	A/C Belt Tension Pressure Regulator		
62	12.7	Front Suspension Air Filter		
63	12.7	R.H. Rear Suspension Air Filter		
64	4.22	Parking Brake Pressure Regulator		
65	17.3	Lavatory Door Pressure Regulator		
66	17.3	Lavatory Door Cylinder Metering Valve		
67	17.3	Lavatory Door Cylinder		
68	4.22	Air Flush Pressure Regulator		
69	17.5	Lavatory Air Flush Button Air Control Valve		
70	4.12	Lavatory Air Flush Quick Release Valve		
71	17.2	Lavatory Air Flush Pump		
72	4.19	Discharge Filter Dryer		
73	17.5	Lavatory External Flush Valve		
74	4.22	Solenoid Valve, Trailing Wheel Suspension		
75	4.22	Solenoid Valve, Trailing Wheel Suspension		
76	4.22	Check Valve, Air Dryer		
77	4.22	Two Way Check Valve		
78	4.22	Shuttle Valve		
79	4.12	Quick Release Valve, Front Brake		
80	4.22	Trailing Wheel Pressure Regulator L.H. & R.H.		